




●FOR 952-2C
SYSTEM RELAY USE
PYF08A-A

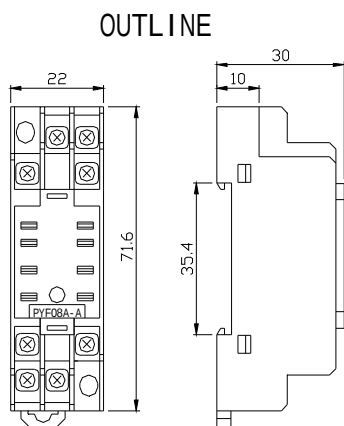


DRILLING PLAN

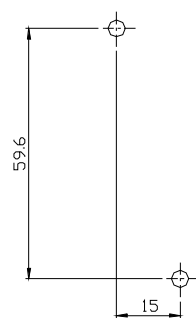


WIRING DIAGRAMS

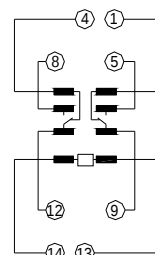


●FOR 952-3C
SYSTEM RELAY USE
PYF11A-A

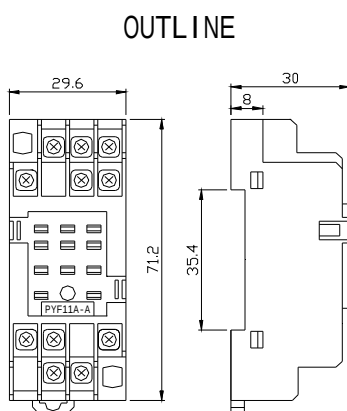


DRILLING PLAN

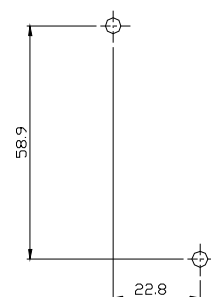


WIRING DIAGRAMS

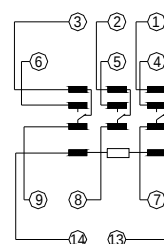


●FOR 952-4C
SYSTEM RELAY USE
PYF14A-A

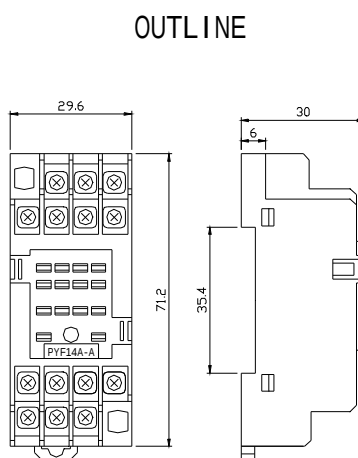

DRILLING PLAN

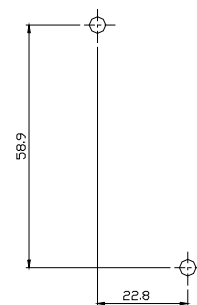

WIRING DIAGRAMS



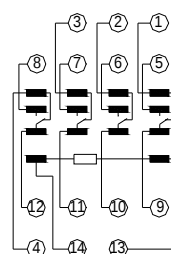


OUTLINE

DRILLING PLAN

WIRING DIAGRAMS


PF113A-A

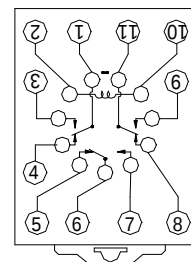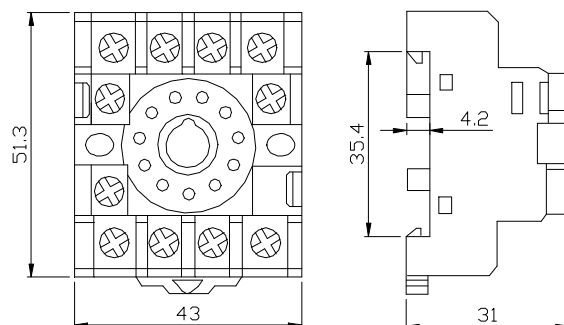


●FOR 952-2C
SYSTEM RELAY USE
PYF08A-E




OUTLINE

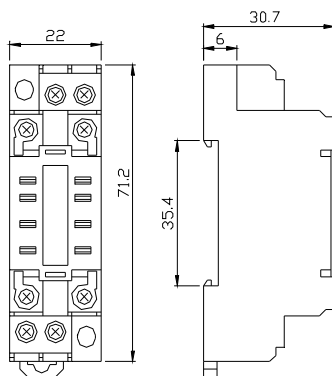

DRILLING PLAN

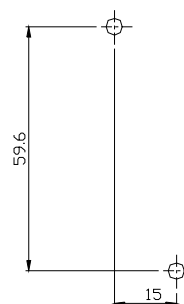


WIRING DIAGRAMS

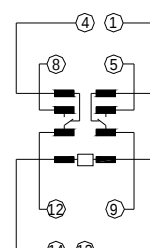


●FOR 952-3C
SYSTEM RELAY USE
PYF11A-E




OUTLINE

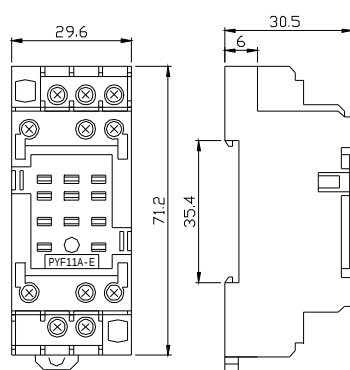

DRILLING PLAN

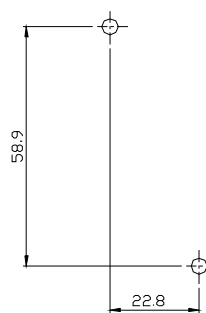


WIRING DIAGRAMS

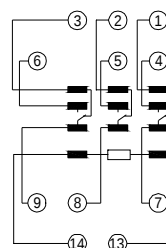


●FOR 952-4C
SYSTEM RELAY USE
PYF14A-E




OUTLINE

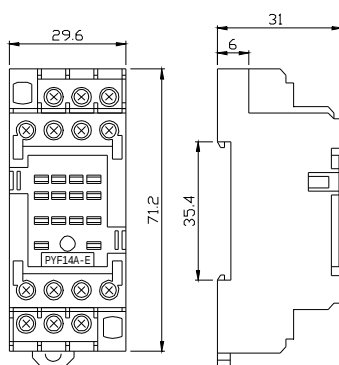

DRILLING PLAN

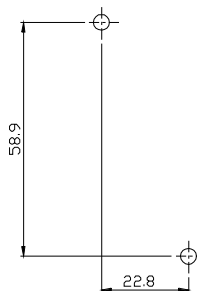

WIRING DIAGRAMS

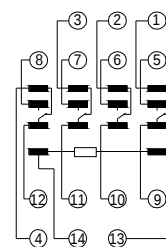

OUTLINE

DRILLING PLAN

WIRING DIAGRAMS

PF113A-E

